

MAINTENANCE SCHEDULE

The motorcycle should be maintained within the specified time, and for safety, it should only be serviced by the Kove repair shop.

The symbols in the table have the following meanings:

I: Inspection, cleaning, adjustment R: Replacement A: Rdjustment L: Rubrication

Items	Times	Maintenance Schedule					
		500~1000 km	every 2000 km	every 4000 km	every 8000 km	every 1 year	every 2 year
※	Throttle operational system	I	I	I	I	I	I
	Air filter	I/R	I/R	I/R	R	R	R
※※	Valve clearance				I		
※	Engine oil	R	R	R	R	R	R
※	Oil filter	R	I/R	R	R	R	R
※	Timing chain tension	I	I	I	I	I	I
	Driving chain tension	I & L	I & L	I & L	I & L	I & L	I & L
	Brake shoes wear	I	I	I	I	I	I
※	Brake system	I	I	I	I	I	I
※	Clutch	I	I	I	I	I	I
※	Pastener	I	I	I	I	I	I
※	Directional bearing	I	I	I	I	I	I
※※	Rear spoke bearing	I	I	I	I	I	I
※	Front and rear wheel bearing	I	I	I	I	I	I
	Battery			I	I	I	I
※	Fuel pipe and filter			I/R	R	R	R
※	Spark plug			I	I	I	I
※	Swing arm bearing				I & L	I & L	I & L
※	Brake fluid					R	R
	Coolant	I	I	I	I	I	R
※	Suspension hydraulic oil				R		

*: The item is repaired by the personnel of the special repair store of Kove repair shop. If the user has special tools, repair parts and repair ability, user can also repair by himself, and the repair knowledge can refer to this instruction manual.

** : To ensure safety, this project can only be repaired by the personnel of the special repair store of Kove.

Attention (For cross-country race or desert) :

1. Air filter clean or change everyday.
2. Valve clearance check and adjust every 30 hours.
3. Clutch check every 20 hours.
5. Suspension hydraulic oil change every 20 hours.

MAINTENANCE SCHEDULE

The motorcycle should be maintained within the specified time, and for safety, it should only be serviced by the Kove repair shop.

The symbols in the table have the following meanings:

I: Inspection, cleaning, adjustment R: Replacement A: Adjustment L: Lubrication

Items \ Times		Maintenance Schedule					
		1000~1500 km	every 5000 km	every 10000 km	every 20000 km	every 1 year	every 2 year
※	Throttle operational system	I	I	I	I	I	I
	Air filter	I/R	I/R	I/R	R	R	R
※※	Valve clearance				I		
※	Engine oil	R	R	R	R	R	R
※	Oil filter	R	R	R	R	R	R
※	Timing chain tension	I	I	I	I	I	I
	Driving chain tension		I & L	I & L	I & L	I & L	I & L
	Brake shoes wear	I	I	I	I	I	I
※	Brake system	I	I	I	I	I	I
※	Clutch	I	I	I	I	I	I
※	Fastener	I	I	I	I	I	I
※	Directional bearing	I	I	I	I	I	I
※※	Rear spoke bearing	I	I	I	I	I	I
※	Front and rear wheel bearing	I	I	I	I	I	I
	Battery			I	I	I	I
※	Fuel pipe and filter			R	R	R	R
※	Spark plug			I	I	I	I
※	Swing arm bearing				I & L	I & L	I & L
※	Brake fluid					R	R
	Coolant	I	I	I	I	I	R

*: The item is repaired by the personnel of the special repair store of Kove repair shop. If the user has special tools, repair parts and repair ability, user can also repair by himself, and the repair knowledge can refer to this instruction manual.

** : To ensure safety, this project can only be repaired by the personnel of the special repair store of Kove.

attention (ride in dirty area):

1. Air filter clean everyday.
2. Clean the suspension every day.

MAINTENANCE SCHEDULE

The motorcycle should be maintained within the specified time, and for safety, it should only be serviced by the Kove repair shop.

The symbols in the table have the following meanings:

I: Inspection, cleaning, adjustment R: Replacement A: Adjustment L: Lubrication

Items	Times	Maintenance Schedule					
		1000~1500 km	every 6000 km	every 12000 km	every 24000 km	every 1 year	every 2 year
※	Throttle operational system	I	I	I	I	I	I
	Air filter	I/R	I/R	I/R	R	R	R
※※	Valve clearance				I		
※	Engine oil	R	R	R	R	R	R
※	Oil filter	R	R	R	R	R	R
※	Timing chain tension	I	I	I	I	I	I
	Driving chain tension		I & L	I & L	I & L	I & L	I & L
	Brake shoes wear	I	I	I	I	I	I
※	Brake system	I	I	I	I	I	I
※	Clutch	I	I	I	I	I	I
※	Fastener	I	I	I	I	I	I
※	Directional bearing	I	I	I	I	I	I
※※	Rear spoke bearing	I	I	I	I	I	I
※	Front and rear wheel bearing	I	I	I	I	I	I
	Battery			I	I	I	I
※	Fuel pipe and filter			R	R	R	R
※	Spark plug			I	I	I	I
※	Swing arm bearing				I & L	I & L	I & L
※	Brake fluid					R	R
	Coolant	I	I	I	I	I	R

*: The item is repaired by the personnel of the special repair store of Kove repair shop. If the user has special tools, repair parts and repair ability, user can also repair by himself, and the repair knowledge can refer to this instruction manual.

** : To ensure safety, this project can only be repaired by the personnel of the special repair store of Kove.

attention (ride in dirty area):

1. Air filter clean everyday.
2. Clean the suspension every day.