

# Kriega®

## OS-32 & OS-22 SOFT PANNIERS FITTING INSTRUCTIONS

### PANNIER FRAMES

To fit the Kriega OS-SOFT PANNIERS the bike **MUST** have pannier frames fitted. These are model specific, available as accessories from bike manufacturers or other after market suppliers including:-

**TOURATECH**

**SW-MOTECH**


**HEPCO & BECKER**

**GIVI**

**RALLYRAID PRODUCTS**

**VANASCHE MOTORSPORTS**

**METAL MULE**

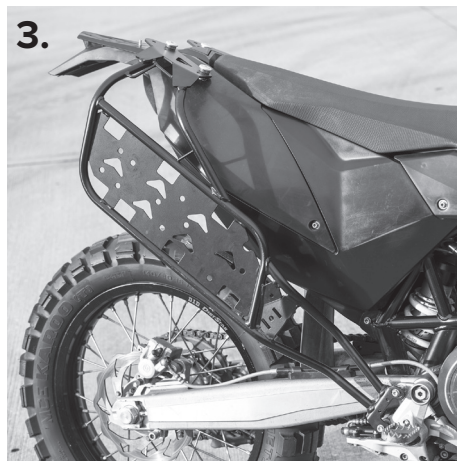

### EXAMPLE PICTURES

1. SW-MOTECH PRO CARRIER - HONDA AFRICA TWIN
2. VANASCHE MOTORSPORTS - HUSQVARNA 701
3. RALLYRAID PRODUCTS - KTM 690 (OS-STRAPS FITTING ONLY)
4. GIVI - BMW S1000XR

There are 2 options\* to fit the OS-SOFT PANNIERS to the bike:

1. Traditional 'over the seat' saddlebag format, using OS-STRAPS\*



2. Fixing an OS-PLATFORM\* to the frame and mounting the OS-PANNIERS to the platform.



\* Sold separately

KRIEGA FITTING VIDEOS  
[www.vimeo.com/kriega](http://www.vimeo.com/kriega)



# OS-STRAPS (sold separately)

Attach the OS-STRAPS to the rear buckle loops on each OS-SOFT PANNIER as follows:



Once the correct width has been set, the mounting straps **MUST** be locked-off to avoid them coming loose.



Adjust strap length to suit bike width.



**IMPORTANT**  
Once the bags are mounted across the seat, the lower OS-SOFT PANNIERS straps must wrap around the bottom rail of the pannier frame to hold it firmly in position. (see back page)

# OS-PLATFORM (sold separately)

Available with 2 fitting options to suit either :

The standard hoop pannier frames with 16mm to 20mm tubes **A.** or SW-Motech® EVO + PRO Carriers **B.**

## PLATFORM FITTING

### **A. Standard hoop pannier frames with 16mm up to 20mm tubes.**

The OS-PLATFORM is designed with multi clamp mounting holes. 5 clamps are included with the OS-PLATFORM, select 3 mounting positions at the top and 2 at the base. The mounting position illustrated below is a guide, you may need to use the alternative mounting holes depending on the frame design.

Mount the clamps using the 5 x M6 bolts supplied with the fitting kit. Use thread-lock on all bolts for extra safety.

**NOTE:** For tubes 16 - 18mm diameter, adhesive foam spacers are included to be attached to the inside of the clamps to provide a firm fit on the tubes.



CLAMP POSITION GUIDE



ADD FOAM SPACER for 16 - 18mm tube frames

---

### **B. SW-Motech® EVO & PRO Carrier**

Fitting hardware is supplied with each OS-PLATFORM, attach to the EVO or PRO Carrier using the 5 sets of M6 bolts, nyloc nuts and washers as illustrated below.





SW-MOTECH® EVO CARRIER



SW-MOTECH® PRO CARRIER

## FITTING AN OS-SOFT PANNIER TO THE OS-PLATFORM

1. Pass the top straps and alloy buckles through the slots on the OS-PLATFORM pull the top strap up until the bottom of the buckle comes through the slot and 'clicks' down into position. (see 1a) This will hold the weight of the pack while you pass the bottom straps through the slots at the base of the OS-PLATFORM.
2. Connect the top and bottom strap hooks.
3. Pull the strap upwards to remove any slack from underneath the bag. Then pull the strap through the cam buckle to fully tighten and lock-off the web by pushing the cam lever down.
4. Push the remaining loose straps down the slots on the front of the pack. (folding it in two makes this easier)

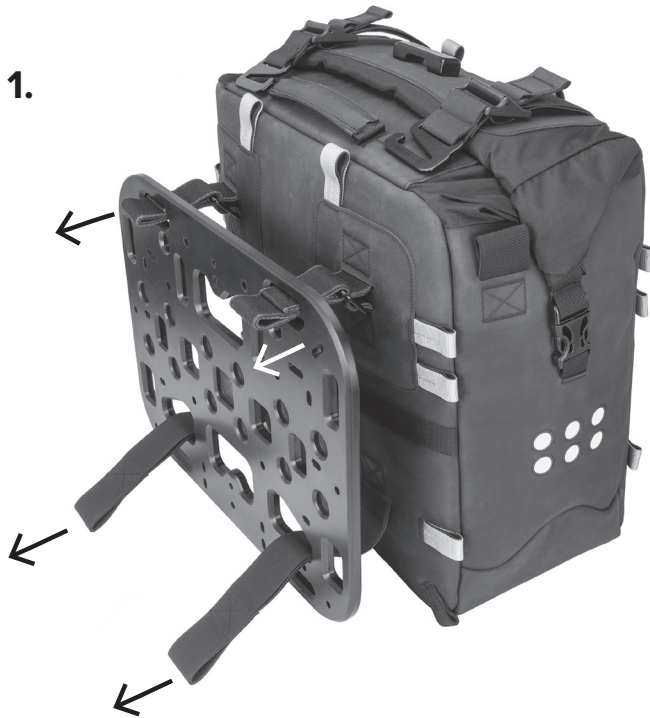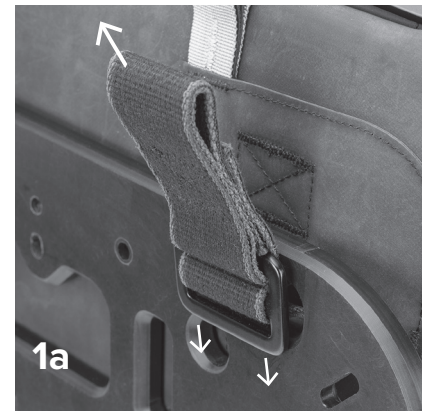

# Kriega®

KRIEGA FITTING VIDEOS  
[www.vimeo.com/kriega](http://www.vimeo.com/kriega)

SCAN FOR



### CARE INSTRUCTIONS

The white liner can be easily removed for cleaning.  
Both the liner and the main pack can be hand washed in warm water with mild soap.  
CAUTION: detergents will damage the waterproof fabric coatings.  
DO NOT tumble-dry or place on direct sources of heat.



*It is the owner's responsibility to ensure the pannier bags are attached in such a way that they do not damage or put at risk the owner or the property of the owner or a third party. Do not exceed the UK legal speed limit. This product has only been tested for up to UK road legal speeds.*